



SureLock™ Integrated Weight System Kit (PN 427103)

READ ALL INSTRUCTIONS PRIOR TO ASSEMBLY

Included in this kit:

- Two Weight Sheaths
- Two 10lb (4.5 kg) SureLock Weight Pockets

* If any of these parts are missing, please contact your authorized dealer.

WEIGHT SHEATH WEIGHT POCKET



! WARNING: Prior to installing the optional SureLock integrated weight system on to your BC, ensure that you have reviewed the correct procedures for loading, securing and releasing the SureLock weight pocket system to your BC. Information regarding the SureLock weight system and additional features of the BC can be found in the Buoyancy Compensator Owner's Manual that accompanies your BC.

Step 1. Orienting Sheath

Find the male and female buckles located inside the rear lobe opening. You will notice that the male buckle is located on the top of both the left and right side lobes (**Fig. 1**). The removable weight sheaths are left and right side specific. To properly identify the left and right removable weight sheaths, lay the sheath down on the ground. The female buckle and the hook material should be facing upward (**Fig. 2**).



SureLock™ Integrated Weight System Kit (PN 427103)

READ ALL INSTRUCTIONS PRIOR TO ASSEMBLY

Included in this kit:

- Two Weight Sheaths
- Two 10lb (4.5 kg) SureLock Weight Pockets

* If any of these parts are missing, please contact your authorized dealer.

WEIGHT SHEATH WEIGHT POCKET



! WARNING: Prior to installing the optional SureLock integrated weight system on to your BC, ensure that you have reviewed the correct procedures for loading, securing and releasing the SureLock weight pocket system to your BC. Information regarding the SureLock weight system and additional features of the BC can be found in the Buoyancy Compensator Owner's Manual that accompanies your BC.

Step 1. Orienting Sheath

Find the male and female buckles located inside the rear lobe opening. You will notice that the male buckle is located on the top of both the left and right side lobes (**Fig. 1**). The removable weight sheaths are left and right side specific. To properly identify the left and right removable weight sheaths, lay the sheath down on the ground. The female buckle and the hook material should be facing upward (**Fig. 2**).



Step 2. Installing Sheath

Open the hook and loop closure at the front of the lobe. Take the sheath and insert it into the front opening of the lobe (Fig. 3). Affix the hook and loop on the sheath to the corresponding hook and loop on the inside edge at the front of the lobe (Fig. 4).




Step 2. Installing Sheath

Open the hook and loop closure at the front of the lobe. Take the sheath and insert it into the front opening of the lobe (Fig. 3). Affix the hook and loop on the sheath to the corresponding hook and loop on the inside edge at the front of the lobe (Fig. 4).




Step 3. Fastening Sheath

Ensure the Hook and Loop closure are secured to the sheath (Fig. 5). Reach into the rear opening and attach the male and female buckles to the sheath (Fig. 6). Repeat this process to secure the other SureLock sheath assembly.

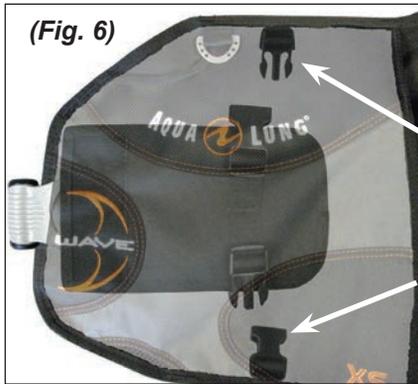

Step 3. Fastening Sheath

Ensure the Hook and Loop closure are secured to the sheath (Fig. 5). Reach into the rear opening and attach the male and female buckles to the sheath (Fig. 6). Repeat this process to secure the other SureLock sheath assembly.

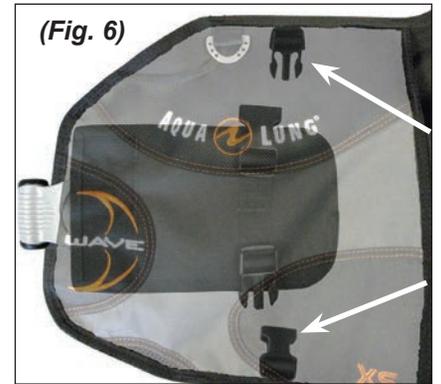

AQUA LUNG

2340 Cousteau Court
Vista, Ca. 92081
Phone (760) 597-5000
www.aqualung.com

AQUA LUNG

2340 Cousteau Court
Vista, Ca. 92081
Phone (760) 597-5000
www.aqualung.com